

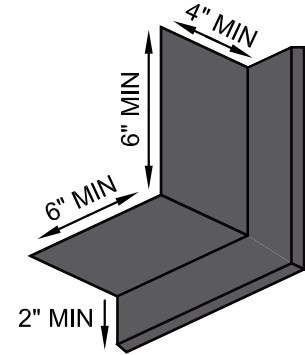
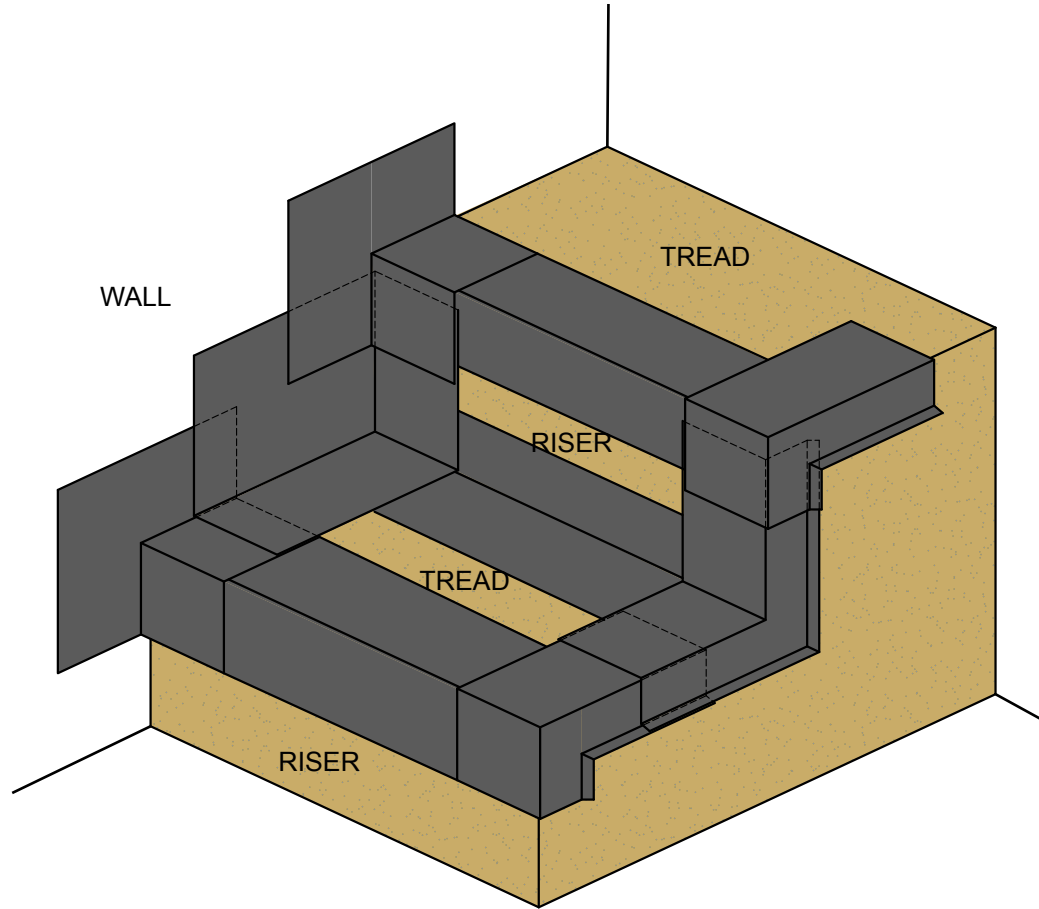


PREFAB PIECES
INSIDE STAIRS

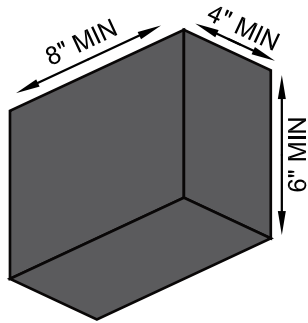

PREFAB PIECES
OUTSIDE STAIRS

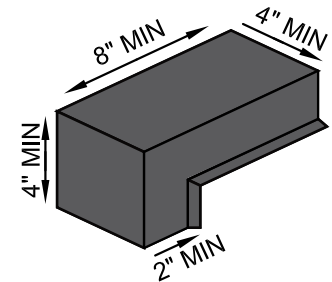

NOTES:

- Apply WP-53 Hybrid Sealant on all flashing seams and overlaps.
- Standard overlap is bottom to top with a 4" overlap.
- Concrete substrates must be a minimum 2500 PSI.
- Refer to local building codes and standards
- Refer to appropriate System and Product Specification Sheets for additional information.

All details are for reference only and should be evaluated by architect. These details are not a substitute for specifications, plans or evaluation reports.
Architect, consultant or similar professional should review prior to major waterproofing applications.

REV. 5/5/25 TC

WESTCOAT STAIR FLASHING - PRE-FAB DETAIL

DIVISION 07 18 13
Pedestrian Traffic Coatings

SCALE : NTS



westcoat[®]

4007 Lockridge Street • San Diego, CA • 92102
800.250.4519 • westcoat.com