


## KEYNOTES

- ① Existing Flooring
- ② Temper-Crete Coat
- ③ Anchor Keyway

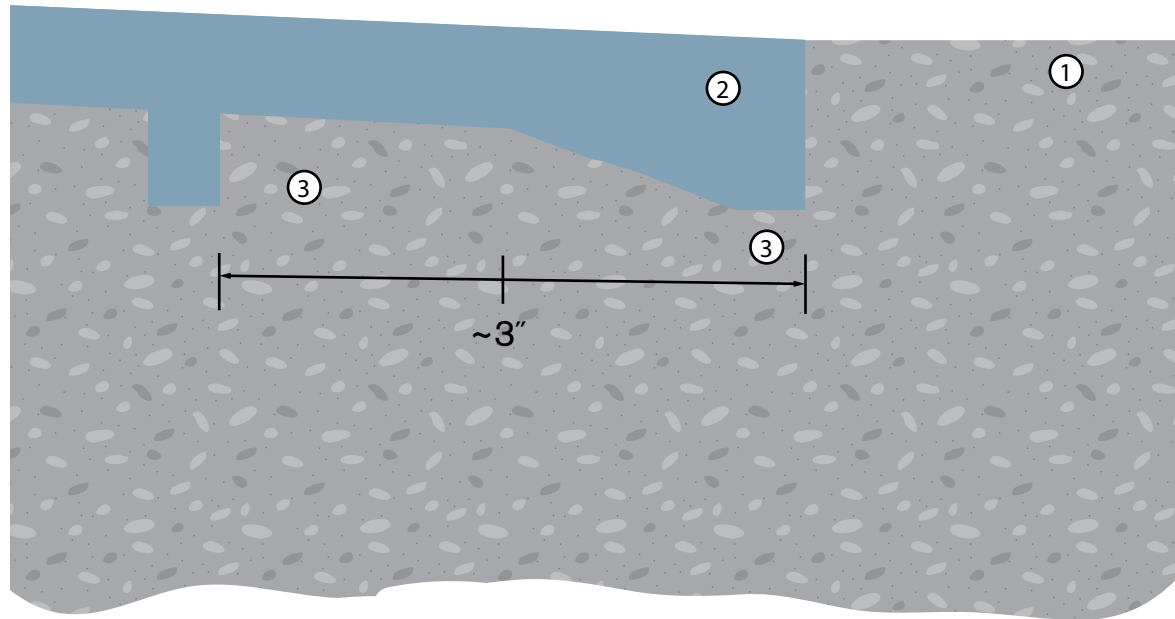

- Make ~3/8" saw cut adjacent to existing flooring for termination of Temper-Crete Coat.
- Concrete must be a minimum 3,500 PSI.
- Concrete must be cured for a minimum 14 days.
- Concrete should be prepared to a profile equal to ICRI CSP 3-5.
- Refer to local building codes and standards.
- Refer to all Product and System Specifications for additional information.

REV. 1/20/19 TC

### TEMPER-CRETE - KEYED EDGE TERMINATION

DIVISION 09 67 23  
Resinous Flooring

SCALE : As Noted



**westcoat**  
SPECIALTY COATING SYSTEMS

4007 Lockridge Street • San Diego, CA • 92102  
800.250.4519 • westcoat.com