


# KEYNOTES

- ① Concrete Substrate
- ② Temper-Crete Coat
- ③ Anchor Keyway
- ④ Pipe/Duct
- ⑤ Backer Rod
- ⑥ Joint Filler

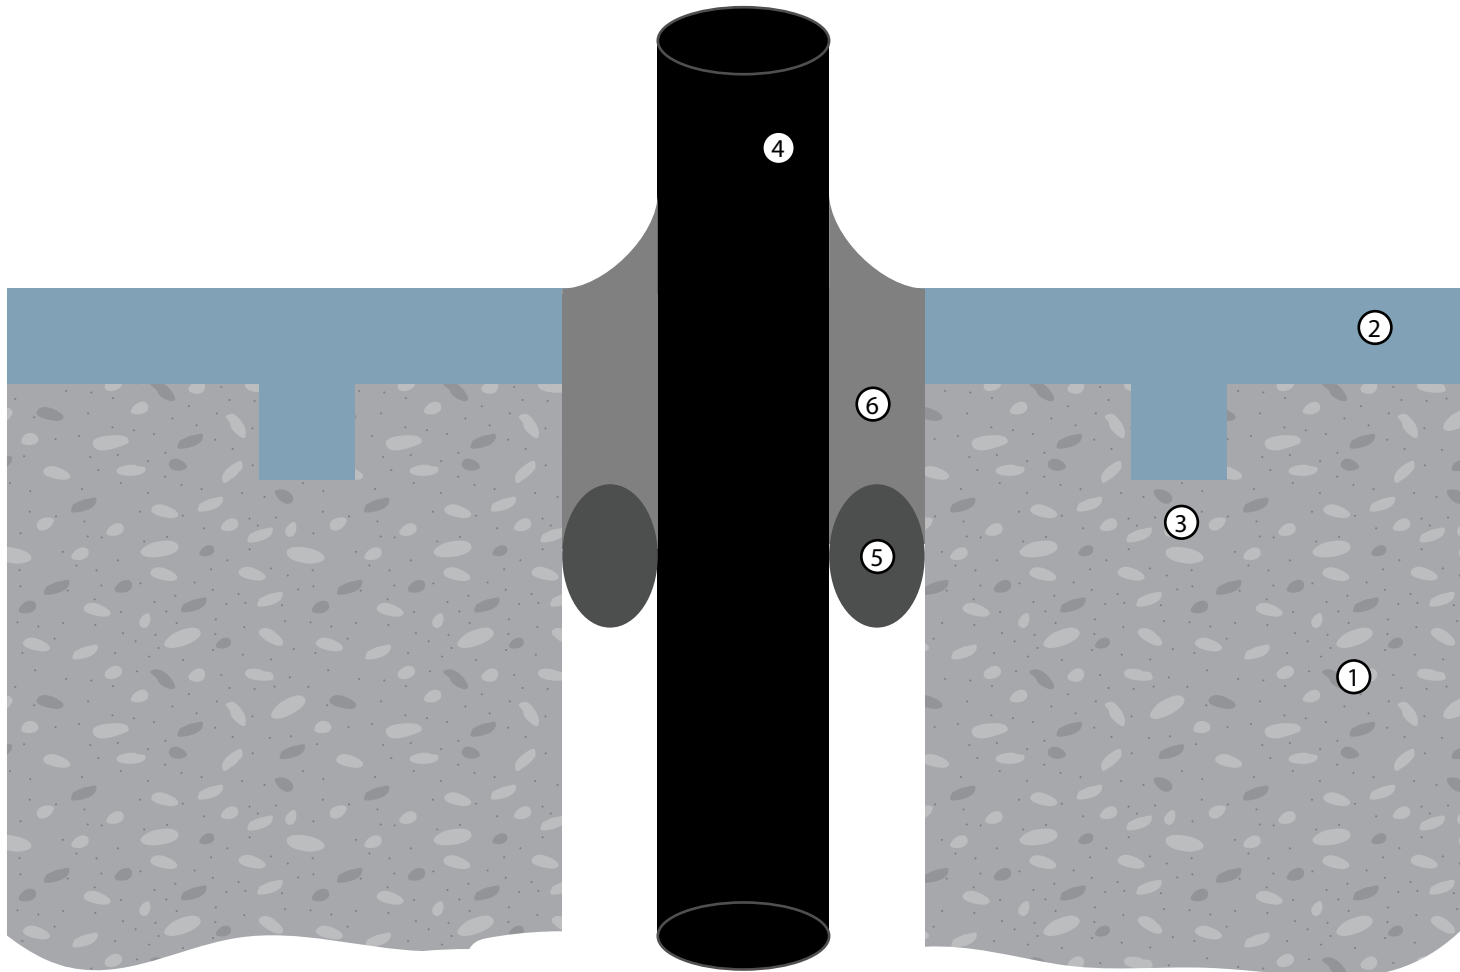

- Concrete must be a minimum 3,500 PSI.
- Concrete must be cured for a minimum 14 days.
- Concrete should be prepared to a profile equal to ICRI CSP 3-5.
- Refer to local building codes and standards.
- Refer to all Product and System Specifications for additional information.

REV. 6-2-22 TC

## TEMPER-CRETE - PIPE/DUCT PENETRATION THROUGH FLOOR

DIVISION 09 67 23  
Resinous Flooring

SCALE : NTS



**westcoat**  
SPECIALTY COATING SYSTEMS

4007 Lockridge Street • San Diego, CA • 92102  
800.250.4519 • westcoat.com