


KEYNOTES

- ① Concrete Substrate
- ② Temper-Crete Coat
- ③ Anchor Groove/Keyway
- ④ Drain Cover
- ⑤ Drain Trench
- ⑥ Joint Sealant

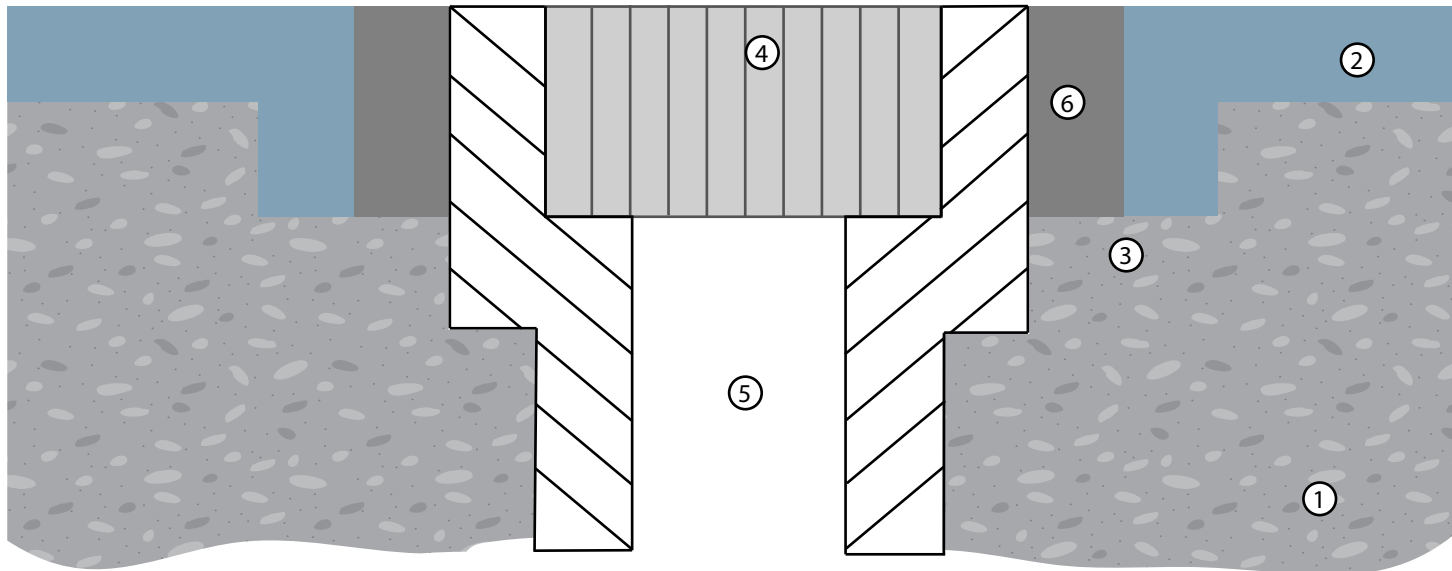

- Concrete must be a minimum 3,500 PSI.
- Concrete must be cured for a minimum 14 days.
- Concrete should be prepared to a profile equal to ICRI CSP 3-6.
- Refer to local building codes and standards.
- Refer to all Product and System Specifications for additional information.

REV. 3/20/19- TC

TEMPER-CRETE - TRENCH DRAIN TERMINATION

DIVISION 09 67 23
Resinous Flooring

SCALE : NTS



westcoat
SPECIALTY COATING SYSTEMS

4007 Lockridge Street • San Diego, CA • 92102
800.250.4519 • westcoat.com